

Flat Clip Assembly Instructions



FOR USE WITH UN62029




INSTRUCTIONS

Recommended Equipment & Accessories (NOT INCLUDED)

- Hammer (a)
- Setting cylinder (b) (or bolt with flat end, approx. 3/8" - test bolt to make sure it fits in the clip holes)
- Work surface that is suitable for hammering


Materials

- Clipboard (d)
- Clip (e)
- Rivet set (f) (1 top and 1 bottom rivet for each hole)

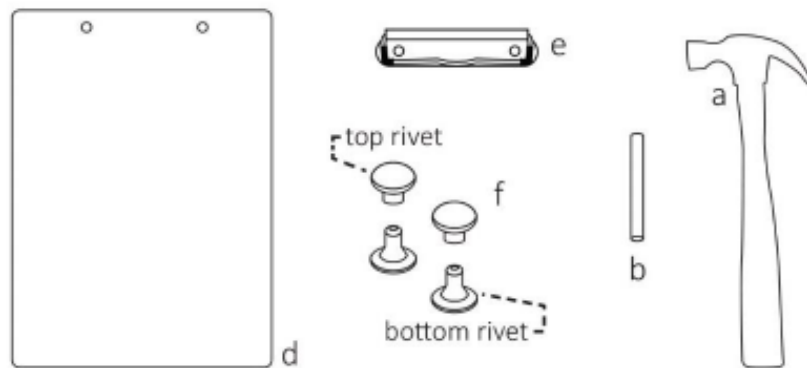

General Assembly Instructions

- Place the clipboard onto the work surface.
- Insert the bottom rivets with the shafts pointing up through the clipboard holes.
- Place the clip on top of the clipboard, aligning the clip holes with the bottom rivets.
- Place a top rivet onto the bottom rivet shaft.
- Use a hammer and set cylinder to tap the rivet into place.
- Repeat above steps for the second rivet assembly.

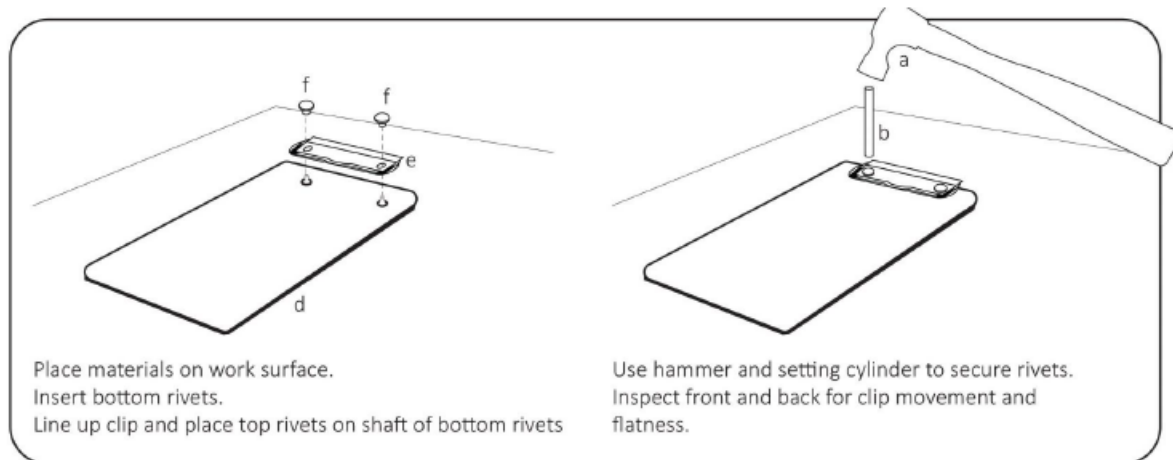

- Check the back of the clipboard to make sure that the back rivets are flat.
 - Make sure to utilize a rigid work surface for best results.
- Check the clip to make sure it is secure to the surface of the clipboard.
 - If the clip is loose, try tapping the rivet assemblies with the hammer and set cylinder again to seat them more securely.
- **IMPORTANT:** Make sure the clip is tightly attached to the clipboard and ALL rivets are flat to the surface.



To order more of this product, see similar products and much more, please visit JPPlus.com.

For additional product support and troubleshooting, please contact JPPlus Advanced Support Team:

- Phone: 419-500-4877
- Email: ast@jpplus.com
- Schedule an appointment: jpplusadvancedsupport.setmore.com/