


8.5"x14" Jig for (24) PC700 Poker Chips

JOHNSONPLASTICS
PLUS

PC700J

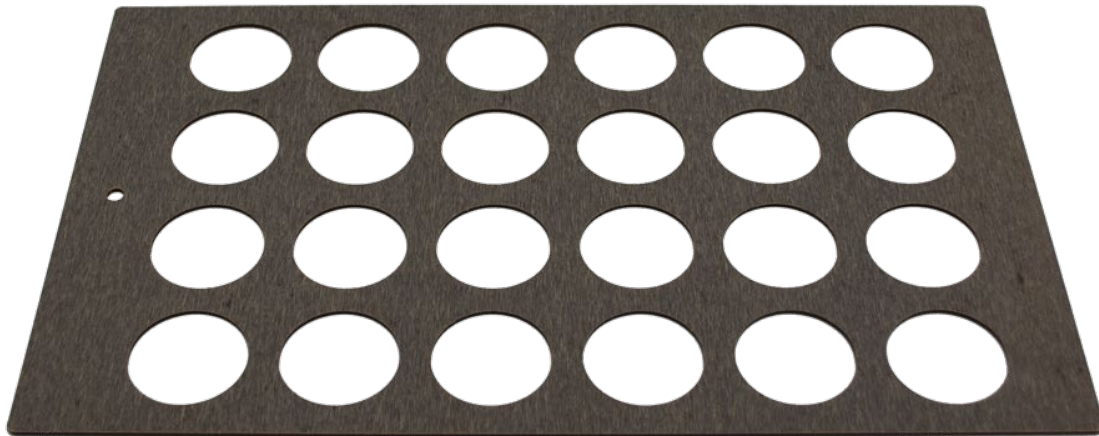

INSTRUCTIONS

Recommended Equipment & Accessories

- Sublimation Printer
- Standard Flat Heat Press- Swing-away style press recommended
- Heat Tape
- Teflon sheet or Blowout paper

General Instructions

- After aligning your artwork in the template, place the jig on a piece of blowout paper on your heat press.
 - Place the blank poker chips in the cutout holes of the jig.
 - Print the sublimation transfer. Align the transfer paper over the jig and secure with heat tape.
 - Press the poker chips for the recommended time.
 - For full instructions on pressing the Matte White Poker Chips, see the PC700/LTC-1052 Tech Tip.
-

Tips and Tricks

- It may be necessary to secure the jig down to the heat press platen as the jig may try to warp slightly after several press cycles.
 - For longer production runs, tape the jig down to a scrap piece of engraving aluminum to help preserve flatness of the jig more effectively.
 - If pressing the second side of the poker chips, make sure to replace the blowout paper underneath the chips with a new piece before pressing the next set of new blank chips.
-

To order more of this product, see similar products and much more, please visit jpplus.com.

For additional product support and troubleshooting, please contact JPPlus Advanced Support Team:

- Phone: 419-500-4877
- Email: ast@jpplus.com
- Schedule an appointment: <https://jpplusadvancedsupport.setmore.com/>