

Mounting Accessories

Tip Sheet

For use with Products;

5902- Mount Item for Chroma luxe AL 5881, 5882 (spacers)

5903 - Mount Item for Chroma luxe AL 5881 (9"x12" Panel)

5904 - Mount Item for Chroma luxe AL 5882 (11.625"x14" Panel)

Instructions


1. Sublimate aluminum and let it cool PRIOR to applying hanger.
2. Find the center of your aluminum at the top, bottom and both sides and mark with a pencil.
3. A) The mounting board should be placed in the center of the back of the aluminum panel. OR 38

B) Spacer blocks should be centered from side to side and approximately 2" from the top and bottom. The keyhole block should be at the top of the aluminum panel.
4. Remove white release paper from hanger. Do NOT touch the adhesive 4 area after removing the white release paper.
5. Place your hanging accessory on the back of the panel and press firmly on the adhesive-backed area of the hanger.
6. DO NOT attempt to reposition this hanger once it has been applied - it will not have good adhesion if it is repositioned.
7. Allow hanger adhesive to cure for 24 hours before use. Adhesive-backed area of the hanger.



3A



3B

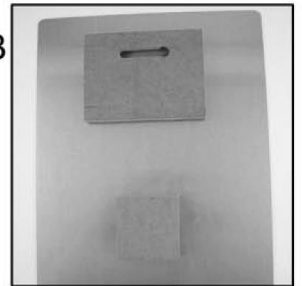

4

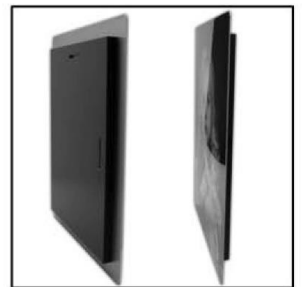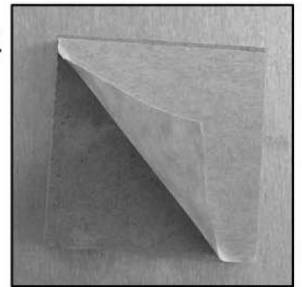

Finished



Phone: (800) 869-7800 • Email: service@johnsonplastics.com

Connect with us: [f](#) [in](#) [t](#) [v](#)

ChromaLuxe™
by UNISUB®