



ALIGNING VINYL ON CLEAR DRINKWARE

Steps for Aligning Vinyl on Clear Drinkware:

1. Create your favorite design in your vinyl cutter program. Add a box around your design to help align the transfer tape and minimize vinyl waste.

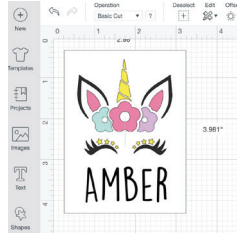

2. Weed design and apply clear vinyl transfer tape to your design using a scraper to ensure that transfer tape is secure.

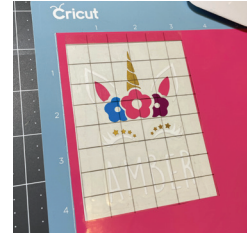

3. Cut small slits around your design on the transfer tape to prevent bubbles and help align your design to the curve of your drinkware.

4. Make sure your drinkware is clean and free of debris. Add a small amount of water to your drinkware to help with alignment.



5. Using your water line, start in the center of your design and lightly place your transfer tape with vinyl on your drinkware. Be sure to follow the curve of your water line while applying.



6. Once you've aligned your design with the transfer tape, empty the water and firmly place the vinyl with a vinyl tool or scraper, making sure to work from the center of your design outward.



7. Once all of your vinyl has been attached start in one corner and slowly roll transfer tape off of your design until removed.



8. Let the vinyl cure on your drinkware for 48-72 hours before use.

